



STRAW BALE BARRIER

2" SQUARE BY 4' MINIMUM WOOD STAKE. INSTALL 2 STAKES PER BALE.

TIGHTLY BUTT BALE ENDS



PLAN VIEW

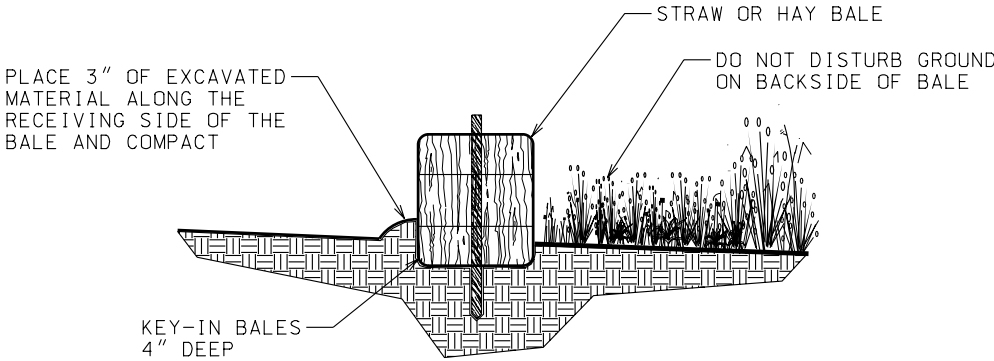

SECTION

NOTES FOR STRAW BALE BARRIER:

1. PLACE STRAW BALE BARRIERS BEFORE BEGINNING EARTH DISTURBING ACTIVITIES.
2. DO NOT PLACE STRAW BALE BARRIERS ACROSS NATURAL STREAM BEDS.
3. MAINTAIN A PROPERLY FUNCTIONING STRAW BALE BARRIER THROUGHOUT THE DURATION OF THE PROJECT OR UNTIL DISTURBED AREAS HAVE BEEN SEEDED AND MULCHED.
4. AFTER SURROUNDING AREAS HAVE BEEN STABILIZED, REMOVE BALES AND STAKES AND LEVEL AND SEED THE AREA. BALES MAY BE BUSTED APART AND SPREAD AS MULCH.

UTAH DEPARTMENT OF TRANSPORTATION
STANDARD DRAWINGS FOR ROAD AND BRIDGE CONSTRUCTION

TEMPORARY
EROSION CONTROL
(STRAW BALE
BARRIER)

STD DWG
EN 7

RECOMMENDED FOR APPROVAL

CHAIRMAN STANDARDS COMMITTEE

DEPUTY DIRECTOR

AUG.25, 2005

DATE

AUG.25, 2005

DATE

REVISIONS

1

08/25/05

T.J.

NEW DRAWING.

REMARKS